

DETERMINE WHERE TO INSTALL YOUR AWNING


Locate a position that is

- (A)** Recommended 8~10 feet above the ground/floor/deck.
- (B)** Minimum 1 inch clearance below the roof/eave/overhang.
- (C)** With at least 12 vertical inch of clear space.



The surface should be free and clear of any obstructions along the entirety of the awning.

- (D)** Minimum 8 feet width.

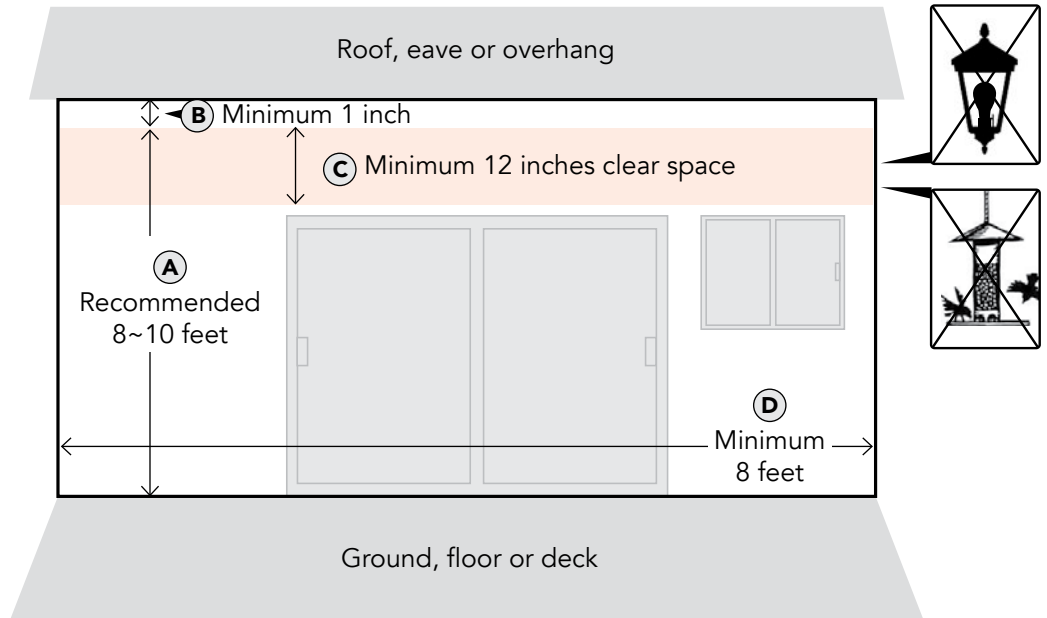

Personal height requirements may require an alternate install height to 10 feet.

Side view

